12V Cordless
Metal Shear

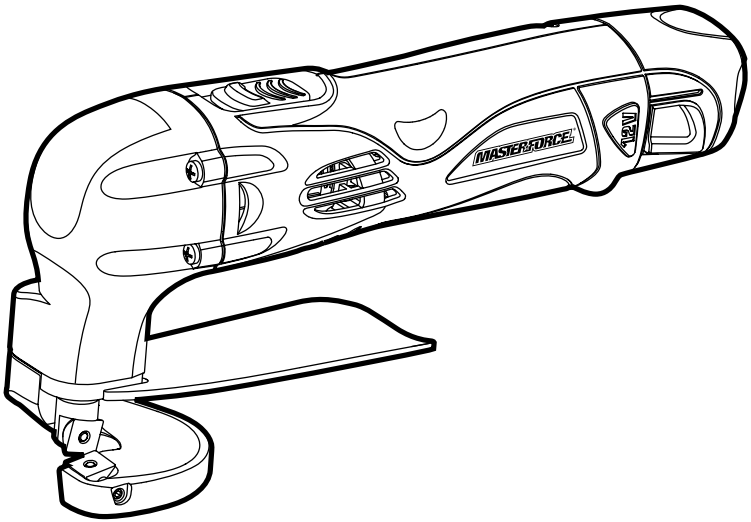

241-0302

For questions/comments, technical assistance or repair parts – Please call toll free: 1-866-917-4374 (M – F 8am – 6pm EST)

OPERATOR'S MANUAL

⚠ CAUTION: To Reduce The Risk Of Injury, User Must Read And Understand Operator's Manual. Save These Instructions For Future Reference.

TABLE OF CONTENTS

Safety Symbols. . . . . Page 2
Safety Instructions . . . . . Page 3
Overview/Specifications . . . . . Page 8
Assembly . . . . . Page 9
Operation . . . . . Page 10
Maintenance . . . . . Page 14
Troubleshooting . . . . . Page 15
Warranty . . . . . Page 18

SAFETY SYMBOLS

Some of these following symbols may be used on this tool. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the tool better and more safely.

Symbol	Name	Designation / Explanation
V	Volts	Voltage
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
W	Watts	Power
∿	Alternating current	Type of current
⎓	Direct current	Type of characteristic of current
n_o	No-load speed	Rotational speed at no load
lbs	Pounds	Weight
⧈	Class II construction	Double insulated construction
.../min	Per minute	Revolutions, strokes, surface speed orbits, etc., per minute
	Wear safety goggles	**⚠ WARNING: The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and a full-face shield when needed. We recommend a Wide Vision Safety Mask for use over eye-glasses or standard safety glasses with side shields. Always use eye protection which is marked to comply with ANSI Z87.1.**

⚠ WARNING: To ensure safety and reliability, all repairs should be performed by a qualified service technician.

SAFETY INSTRUCTIONS

The purpose of safety symbols is to attract your attention to possible dangers. The safety symbols and the explanations with them deserve your careful attention and understanding. The symbol warnings do not, by themselves, eliminate any danger. The instructions and warnings they give are no substitutes for proper accident prevention measures.

⚠ WARNING: Be sure to read and understand all safety instructions in this manual, including all safety alert symbols such as "DANGER," "WARNING," and "CAUTION" before using this tool. Failure to following all instructions listed below may result in electric shock, fire, and/or serious personal injury.

SYMBOL MEANING

SAFETY ALERT SYMBOL: Indicates DANGER, WARNING, OR CAUTION. May be used in conjunction with other symbols or pictographs.

⚠ DANGER: Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.

⚠ WARNING: Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

⚠ CAUTION: Indicates a potentially hazardous situation, which, if not avoided, could result in minor or moderate injury.

NOTICE: (Without Safety Alert Symbol) Indicates a situation that may result in property damage.

SAVE THESE INSTRUCTIONS!

SAFETY INSTRUCTIONS

⚠ WARNING: Read all safety warnings and instructions!

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference.

The "term power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

⚠ WARNING: Risk of fire and electric shock. Dry location use only. Do not expose to rain. Risk of injury.

WORK AREA SAFETY

1. **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
2. **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks that may ignite the dust or fumes.
3. **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

ELECTRICAL SAFETY

1. **Power tool plugs must match the outlet.** Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
2. **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
3. **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
4. **Do not abuse the cord.** Never use the cord for carrying, pulling or unplugging the power tool. Keep the cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
5. **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
6. **If operating a power tool in a damp location is unavoidable, use a ground fault circuit interrupter (GFCI) protected supply.** Use of a GFCI reduces the risk of electric shock.

PERSONAL SAFETY

1. **Stay alert, watch what you are doing and use common sense when operating a power tool.** Do not use the tool while tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious personal injury.
2. **Use personal protective equipment.** Always wear eye protection. Protective equipment, such as a dust mask, non-skid safety shoes, hard hat, or hearing protection, used for appropriate conditions, will reduce personal injuries.
3. **Prevent unintentional starting.** Ensure that the switch is in the off-position before connecting to power source and/or battery pack, picking up, or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
4. **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
5. **Do not overreach.** Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

6. **Dress properly.** Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.
7. **If devices are provided for the connection of dust extraction and collection facilities, ensure that these are connected and properly used.** Use of these devices can reduce dust-related hazards.

USE AND CARE OF THE POWER TOOLS

1. **Do not force the power tool.** Use the correct power tool for your application. The correct power tool will do the job better and more safely at the rate for which it was designed.
2. **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
3. **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
4. **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
5. **Maintain power tools.** Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
6. **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
7. **Use the power tool, accessories, tool bits etc., in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

BATTERY TOOL USE AND CARE

1. **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
2. **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
3. **When the battery pack is not in use, keep it away from other metal objects, such as paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
4. **Under abusive conditions, liquid may be ejected from the battery; avoid contact.** If contact accidentally occurs, flush with water. If liquid contacts eyes, also seek medical help. Liquid ejected from the battery may cause irritation or burns.

SERVICE

1. **Have your power tool serviced by a qualified repair person, using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

SAFETY INSTRUCTIONS

SPECIFIC SAFETY RULES FOR CORDLESS METAL SHEAR

1. **Use battery only with charger listed.**

Battery pack	Charger
252-8016 252-8016(1.5Ah)	252-8020

2. **Hold power tools by their insulated gripping surfaces when performing an operation where the cutting tool may contact hidden wiring.** Contact with a "live" wire will make exposed metal parts of the tool "live" and shock the operator.

3. **Always wear safety goggles or eye protection, leather gloves and safety shoes when using this tool.** Shears produce sharp metal strips or edges that, if contacted, can easily lacerate skin.

4. **Wear ear protectors when using the tool for extended periods.** Prolonged exposure to high intensity noise can cause hearing loss.

5. **Use thick cushioned gloves and limit the exposure time by taking frequent rest periods.** Vibration caused by the shearing action may be harmful to your hands and arms.

6. **Do not run the tool while carrying it at your side.** The cutters could become entangled with clothing and injury may result.

7. **Always use the supplied hand guard.** The guard helps keep the sharp metal strips or pieces away from contacting your hand.

8. **Secure the material being cut.** Never hold a small piece in your hand or across your legs. Do not touch cutters, reach below the work or remove cut material during use of the shear. Shears that cut metal will cut skin easily.

9. **Do not cut material greater than the rated capacity of the shear.** Cutting material greater than the capacity of the shear may cause damage to the cutting edges of the shear.

10. **Do not use dull or damaged cutters or accessories not intended for this shear.** Replace worn cutters. Sharp cutters minimize stalling.

11. **Save these instructions.** Refer to them frequently and use them to instruct others who may use this tool. If you lend this tool to someone else, also lend these instructions to them to prevent misuse of the product and possible injury.

12. **This tool is not suitable for stationary operation.** Do not clamp it in a vice or fasten it to a worktable.

13. **Do not use the tool without the hand guard properly mounted.** Take care that the hand guard is not damaged or bent. Injury could occur when working without or using a damaged hand guard. Have a damaged hand guard replaced immediately by an qualified service technician.

14. **Wear protective gloves while working.** Take care that cut sheet parts do not bend toward your body. Sharp burrs develop from the cut metal sheet and can cause injuries to the operator. If required, press bending steel sheet parts away from your body using gloves.

SAFETY RULES FOR CHARGER

⚠ WARNING: Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury.

1. **Before using the battery charger, read all instructions and cautionary markings in this manual and on the battery charger, the battery, and the product using the battery to prevent misuse of the products and possible injury or damage.**

2. **To reduce the risk of electric shock or damage to the charger and battery, charge only those rechargeable batteries specifically designated on your charger's label.** Other types of batteries may burst, causing personal injury or damage.

3. **Do not use the charger outdoors or expose it to wet or damp conditions.** Water entering the charger will increase the risk of electric shock.

4. **Use of an attachment not recommended or sold by the battery-charger manufacturer may result in a risk of fire, electric shock or injury to persons.**

5. **Do not abuse the cord or charger.** Never use the cord to carry the charger. Do not pull the charger cord to disconnect the plug from receptacle. Damage to the cord or charger could occur and create an electric shock hazard. Replace damaged cords immediately.

6. **Make sure that the cord is located so that it will not be stepped on, tripped over, come in contact with sharp edges or moving parts, or otherwise be subjected to damage or stress.** This will reduce the risk of accidental falls, which could cause injury and damage to the cord, which could then result in electric shock.

7. **Keep the cord and charger away from heat to prevent damage to the housing or internal parts.**

8. **Do not allow gasoline, oils, petroleum-based products, etc. to come in contact with plastic parts.** These materials contain chemicals that can damage, weaken, or destroy plastic.

9. **An extension cord should not be used unless absolutely necessary.** Use of an improper extension cord could result in a risk of fire and electric shock. If an extension cord must be used, make sure that:

- The pins on plug of extension cord are the same number, size and shape as those of the plug on charger.
- The cord is properly wired and in good electrical condition.
- The size is large enough for AC ampere rating of charger as specified in the following table:

Cord Length (in feet)	25'	50'	100'
Cord Size (AWG)	16	16	16

NOTICE: AWG = American Wire Gauge

10. **Do not operate the charger with a damaged cord or plug, which could cause shorting and electric shock.** If damaged, have the charger repaired or replaced by a qualified service technician.

11. **Do not operate the charger if it has received a sharp blow, been dropped, or has otherwise been damaged in any way.** Take it to a qualified service technician for an electrical check to determine if the charger is in good working order.

12. **Do not disassemble the charger.** Take it to a qualified service technician when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.

13. **Unplug the charger from the electrical outlet before attempting any maintenance or cleaning to reduce the risk of electric shock.**

14. **Disconnect the charger from the power supply when it is not in use.** This will reduce the risk of electric shock or damage to the charger if metal items should fall into the opening. It will also help prevent damage to the charger during a power surge.

15. **Risk of electric shock.** Do not touch the uninsulated portion of output connector or an uninsulated battery terminal.

OVERVIEW

FIG. 1

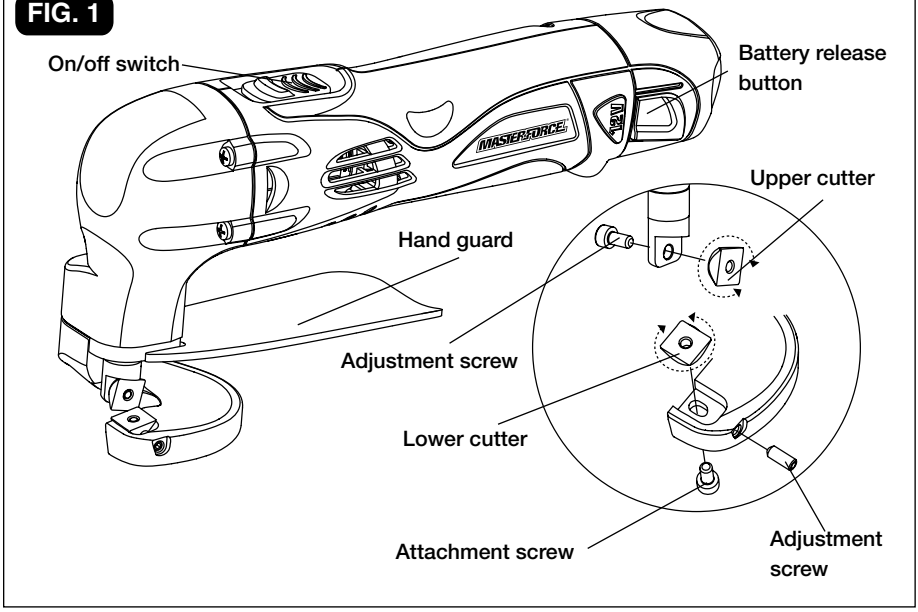

SPECIFICATIONS

Motor	12V DC	
No load speed	3600/min	
Weight (without battery)	2lbs.12oz. (1.25kg)	
Compatible Batteries	252-8016, 252-8016(1.5Ah)	
Battery Charger	252-8020	
Cutting capacity		
Material	Tensile Strength	Max cutting capacity
Steel	400 N/mm^2	18Ga.(1.2mm)
Aluminum	250 N/mm^2	12Ga.(2.0mm)

ASSEMBLY

⚠ WARNING: If any part is broken or missing, DO NOT attempt to attach the battery, plug in the power cord or operate the tool until the broken or missing part is replaced. Failure to do so could result in possible serious injury.

⚠ WARNING: Do not attempt to modify this tool or create accessories not recommended for use with this tool. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious injury.

⚠ WARNING: Your tool should never be connected to the power source when you are assembling parts, making adjustments, cleaning, or when it is not in use. Disconnecting the tool will prevent accidental starting, which could cause serious personal injury.

CONTENTS

Cordless metal shear, 12V battery pack 2pcs, charger, cutter gauge, 2mm hex wrench, 3mm hex wrench, soft bag and instruction manual.

UNPACKING

1. This product has been shipped completely assembled.
2. Carefully remove the tool and any accessories from the box. Make sure that all items listed in the packing list are included.
3. Inspect the tool carefully to make sure that no breakage or damage occurred during shipping.
4. Do not discard the packing material until you have carefully inspected and satisfactorily operated the tool.

ROTATING/CHANGING THE CUTTERS

⚠ WARNING: To avoid serious personal injury, always remove the battery pack from the tool before undertaking any assembly, adjustments or cutter changes.

The upper and lower cutters are identical; each has four cutting edges. The cutters can be interchanged or rotated.

When the cutting performance is unsatisfactory, rotate each cutter 90°or replace it.

To rotate a cutter, loosen the attachment screw of the cutter, rotate the cutter 90°and tighten the screw.

To replace the cutter, remove the attachment screw from the cutter, remove the old cutter, position the new cutter as shown inprovided (Fig. 1). thread the screw into the cutter and securely tighten the screw with the 3mm hex wrench provided.

⚠ WARNING: Ensure that the lower cutter rests against the adjustment screw.

ADJUSTING THE CUTTER CLEARANCE

⚠ WARNING: To avoid serious personal injury, always remove the battery pack from the tool before undertaking any assembly, adjustments or cutter changes.

The cutter clearance “a” (Fig. 2) has been adjusted at the factory to 0.004” and, under normal use, does not need to be adjusted.

FIG. 2

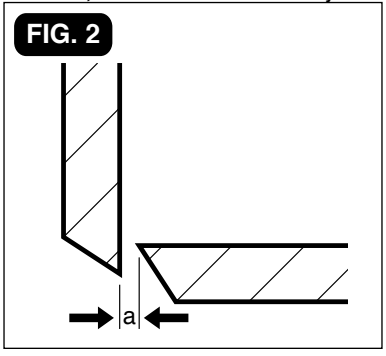

ASSEMBLY

When working with ductile, brittle or thin sheet metal, the following values/cutter clearances give an optimum cutting result:

⚠ WARNING: To reduce the risk of injury, use only those accessories or attachments recommended in this instruction manual.

Metal	Metal thickness	Cutter clearance “a”
Thin	0.012”-0.024” (0.3-0.6mm)	0.002”(0.05mm)
Normal	0.024”-0.047” (0.6-1.2mm)	0.004”(0.1mm)
Thick	0.047”-0.08” (1.2-2.0mm)	0.006”(0.15mm)

To adjust the the cutter clearance:

Loosen the attachment screw of the lower cutter and adjust with the adjustment screw to the required clearance “a”. Check the clearance with the cutter gauge. Retighten the screw with the 2mm hex wrench provided(Fig.1).

⚠ DANGER: The cutters must not touch each other.

OPERATION

BATTERY PROTECTION

The battery circuitry protects the battery pack from extreme temperature, over discharge, and over-charge. To protect the battery from damage and prolong its life, the tool’s circuitry will turn off the battery pack if it becomes overloaded or if the temperature becomes too high during use. This may happen in extremely high torque, binding, and stalling situations. The battery pack will begin normal operation when it cools down.

NOTICE: A significantly reduced run time after fully charging the battery pack indicates that the battery is near the end of its usable life and must be replaced.

COLD WEATHER OPERATION

When the battery pack is very cold, it may “pulse” for the first minute of use to warm itself. Put the battery pack on a tool and use the tool in a light application. After about a minute, the battery pack will have warmed itself and will operate normally.

WHEN TO CHARGE THE BATTERY PACK

It is not necessary to run down the battery pack charge before recharging. The Lithium-Ion battery can be charged at any time and will not develop a “memory” when charged after only a partial discharge.

Remove the battery pack from the tool when it’s convenient for you and your job. “Top off” the battery pack charge by charging it for a time before starting a big job or long period of use.

Due to Lithium-Ion fade-free properties, the only time it is necessary to charge the Lithium-Ion battery pack is when the pack has reached the end of its charge. To signal the end of charge, power to the tool will drop quickly. Charge the battery pack as needed.

OPERATION

HOW TO CHARGE THE BATTERY PACK (FIG. 3)

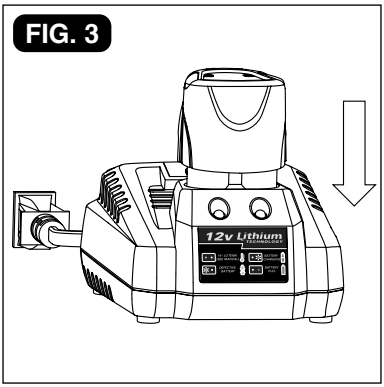

NOTICE: This Lithium-Ion battery pack is shipped partially charged. Before using it the first time, fully charge the battery pack.

A fully discharged battery pack will charge about 35 minutes in the desired surrounding temperature between 50°F(10°C) and 104°F(40°C).

1. Charge the battery pack with the correct charger (252-8020).
2. Connect the charger to a power supply .
3. Attach the battery pack to the charger by aligning the raised ribs of the battery pack with the slot in the charger.
4. Insert the battery pack into the charger.
5. The charger will communicate with the battery pack's circuitry to evaluate the condition of the battery pack.
6. During normal charging, the green LED on the charger will flash continuously. After charging is complete, the green LED on the charger will be on. The flickering red light indicates a defective battery or a bad connection between the battery and the charger.
7. The battery pack will fully charge, but it will not overcharge.

LED FUNCTIONS OF CHARGER

LED INDICATOR	BATTERY PACK	RED LED	GREEN LED	ACTION
HI / LO TEMP.	Hot/Cold battery	On	Off	Fast charge will begin when battery returns to between 50°F (10°C) and 104°F (40°C)
DEFECTIVE BATTERY	Defective	Flashing	Off	Battery pack or charger is defective
BATTERY CHARGING	Charging	Off	Flashing	Charging
BATTERY FULL	Fully charged	Off	On	Charging is complete

OPERATION

CHARGING A HOT BATTERY PACK

If the battery pack is above the normal temperature range, the red LED will illuminate and the green LED will be off. When the battery pack cools down to approximately 104°F (40°C), the charger will automatically begin charging.

CHARGING A COLD BATTERY PACK

If the battery pack is below the normal temperature range, the red LED will illuminate and the green LED will be off. When the battery warms to a temperature of more than 41°F (10°C), the charger will automatically begin charging .

DEFECTIVE BATTERY

If the charger detects a problem, the red LED will begin flashing and the green LED will be off.

1. If registering as defective, remove and reinsert the battery pack in the charger. If the LED status reads “defective” a second time, try to charge a different battery pack.
2. If a different battery pack charges normally, dispose of the defective battery pack (see Maintenance section).
3. If a different battery pack also indicates “defective,” the charger may be defective.

WALL-MOUNT HOLES

The charger has hanging holes for convenient storage. Install screws in the wall 2-1/8 inches apart.

Use screws sufficiently strong to hold the combined weight of the charger and battery pack.

TO ATTACH BATTERY PACK (FIG.4)

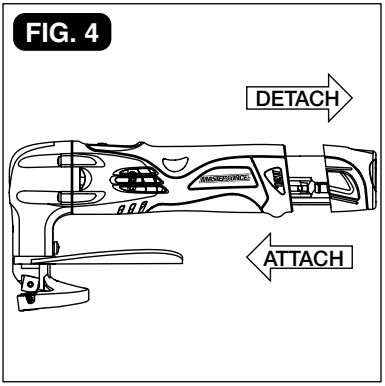

⚠ CAUTION: Avoid the possibility of accidental starting, always take care not to activate the trigger switch when you are attaching the battery pack or performing other adjustments to the tool.

1. Align the raised portion on the battery pack with the grooves on the bottom of the metal shears, then attach the battery pack to the metal shear as shown.
2. Make sure that the latch on the battery pack snaps into place and battery pack is secured to tool before beginning operation.

⚠ CAUTION: When placing the battery pack in the tool, be sure that the raised rib on battery pack aligns with the groove on the metal shear and the latches snap into place properly. Improper assembly of the battery pack can cause damage to internal components.

TO DETACH BATTERY PACK

1. Depress the battery release buttons located on the both sides of the battery pack to release battery pack.
2. Pull battery pack out and remove it from the tool.

OPERATION

⚠ CAUTION: When placing the battery pack in the tool, be sure that the raised rib on battery pack aligns with the groove on the metal shear and the latches snap into place properly. Improper assembly of the battery pack can cause damage to internal components.

HOW TO CUT METAL SHEET (FIG.5)

FIG. 5

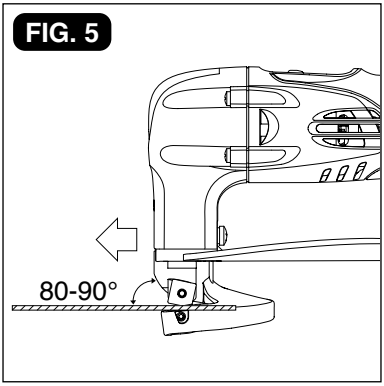

⚠ WARNING: Do not use the shears without the hand guard securely in place.

1. Before cutting, lightly oil the cutting line with cutting oil; do not use any flammable materials
2. Hold the tool at a forward-tilting angle of 80° to 90° to the workpiece; do not tilt the tool side to side.
3. Turn the tool on. Your tool should be running at full speed before starting the cut.
4. Guide the tool evenly with light feed pressure in the direction cut. Excessive feed pressure will reduce the performance considerably, shorten the life of the cutters and can cause damage the tool.
5. When cutting curves, work with a light feed pressure and do not tilt the tool laterally.
6. Turn off the tool only after completing the cut.

Sharp cutters produce good cutting results and protects the tool.

⚠ WARNING: Do not load the tool so heavily that it stalls.

MAINTENANCE

⚠ WARNING: To avoid serious personal injury, always remove the battery pack from the tool when cleaning or performing any maintenance. Never disassemble the power source, battery pack or charger. Contact a qualified service technician for ALL repairs.

⚠ WARNING: Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

⚠ WARNING: If the supply cord is damaged, it must be replaced by a specially prepared cord available through the service organization.

⚠ WARNING: When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage. To ensure safety and reliability, all repairs should be performed by a qualified service technician.

Periodic maintenance of your shear allows for long life and trouble-free operation.
A cleaning, lubrication and maintenance schedule should be maintained.
As a common-sense and preventive maintenance practice, follow these recommended steps:

1. Inspect the shear and accessories; check them for wear or damage.
2. Keep the ventilation slots clean to prevent overheating of the motor.
3. The shear maybe cleaned most effectively with compressed dry air. Always wear safety goggles when cleaning tools with compressed air.
4. Use a soft, clean, damp cloth to wipe the tool housing. A mild detergent can be used but nothing like alcohol, petrol or other cleaning agent. Never use caustic agents to clean plastic parts.

BATTERY PACK REMOVAL AND PREPARATION FOR RECYCLING

To preserve natural resources, please recycle or dispose of batteries properly. This product contains Lithium-Ion batteries. Local, state, or federal laws may prohibit disposal of Lithium-Ion batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.

⚠ WARNING: Upon removal of the battery pack for disposal or recycling, cover the battery pack's terminals with heavy-duty adhesive tape. Do not attempt to destroy or disassemble battery pack or remove any of its components. Lithium-Ion batteries must be recycled or disposed of properly. Never touch both terminals with metal objects and/or body parts as short circuit may result. Keep away from children. Failure to com-ply with these warnings could result in fire and/or serious injury.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The metal shear does not work.	Battery is depleted.	Charge the battery.
	The metal shear is too hot.	Cool down the metal shear.
	The metal is too thick.	Use thinner metal.
The metal shear does not cut smoothly.	The cutter(s) are dull.	Change the cutter(s).

NOTES

NOTES

12V CORDLESS METAL SHEAR

WARRANTY

90-DAY MONEY BACK GUARANTEE:

This MASTERFORCE® brand power tool carries our 90-DAY Money Back Guarantee. If you are not completely satisfied with your MASTERFORCE® brand power tool for any reason within ninety (90) days from the date of purchase, return the tool with your original receipt to any MENARDS® retail store, and we will provide you a refund – no questions asked.

3-YEAR LIMITED WARRANTY:

This MASTERFORCE® brand power tool carries our famous No Hassle 3-Year Limited Warranty to the original purchaser. If, during normal use, this MASTERFORCE® power tool breaks or fails due to a defect in material or workmanship within three (3) years from the date of original purchase, simply bring this tool with the original sales receipt back to your nearest MENARDS® retail store. At its discretion, MASTERFORCE® agrees to have the tool or any defective part(s) repaired or replaced with the same or similar MASTERFORCE® product or part free of charge, within the stated warranty period, when returned by the original purchaser with original sales receipt. Not withstanding the foregoing, this limited warranty does not cover any damage that has resulted from abuse or misuse of the Merchandise. This warranty: (1) excludes expendable parts including but not limited to blades, brushes, belts, bits, light bulbs, and/or batteries; (2) shall be void if this tool is used for commercial and/or rental purposes; and (3) does not cover any losses, injuries to persons/property or costs. This warranty does give you specific legal rights and you may have other rights, which vary from state to state. Be careful, tools are dangerous if improperly used or maintained. Seller's employees are not qualified to advise you on the use of this Merchandise. Any oral representation(s) made will not be binding on seller or its employees. The rights under this limited warranty are to the original purchaser of the Merchandise and may not be transferred to any subsequent owner. This limited warranty is in lieu of all warranties, expressed or implied including warranties or merchantability and fitness for a particular purpose. Seller shall not be liable for any special, incidental, or consequential damages. The sole exclusive remedy against the seller will be for the replacement of any defects as provided herein, as long as the seller is willing or able to replace this product or is willing to refund the purchase price as provided above. For insurance purposes, seller is not allowed to demonstrate any of these power tools for you.

For questions / comments, technical assistance or repair parts – Please Call Toll Free at: **1-866-917-4374**. (M-F 8am – 6pm)

SAVE YOUR RECEIPTS
THIS WARRANTY IS VOID WITHOUT THEM

MENARDS®

© 2012 Menard, Inc., Eau Claire, WI 54703

07/2012